

TURN ALL POWER OFF BEFORE STARTING INSTALLATION.

Route Blue, Black and Yellow SoftStart wires into the electrical box. Then crimp Connectors onto all SoftStart wires as indicated in drawing.

- Step ① Follow White Compressor Wire from Compressor to Run Capacitor "C" terminal. Disconnect from "C" terminal and connect it to Blue SoftStart wire.
- Step ② Connect Black SoftStart wire to the terminal that the White Compressor Wire was on.
- Step ③ Connect Yellow SoftStart wire on terminal next to Red Compressor Wire on "Herm" Side of Run Capacitor.
- Step 4 IF you see a second Red wire next to the Red Compressor Wire, disconnect it and seal end with electrical tape.
- Step (§) Remove Compressor cap. Disconnect Blue Compressor Wire and connect to Red SoftStart wire. Tape connection.
- Step (6) Connect Brown SoftStart wire onto the terminal that the Blue Compressor Wire was on.

Secure all wires. Tape connections with electrical tape.

Turn Power and A/C Breaker on. Turn A/C to Auto Cool setting and set the thermostat to 55°F.

Look at SoftStart LED lights. Green light should be "on". Green light means the Compressor is running (there may be a full 3-minute delay before Green light comes on). IF there is no Green light after 4 minutes, call SoftStart Tech Support for assistance.

After establishing Green light operation, re-install all A/C covers.

Turn A/C on, set near to outdoor temperature and run for 30 minutes.

After 30 minutes, operate A/C normally.

SSRV3T Wiring Diagram for Dometic Brisk I and II

Copyright © MMXXII NetworkRV LLC. All Rights Reserved.