



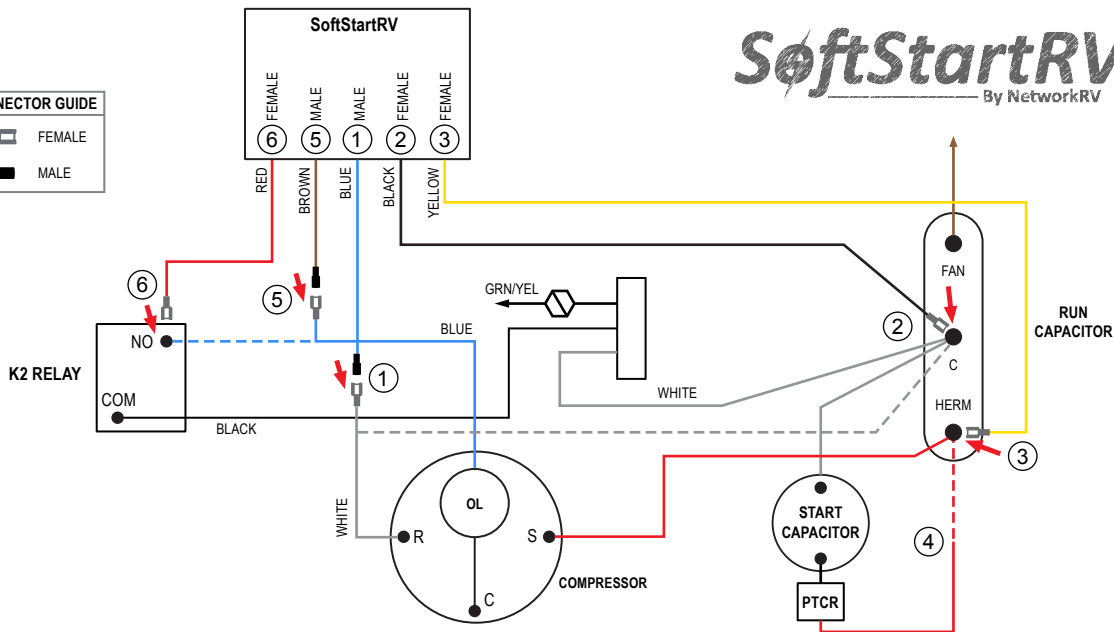


WIRE CONNECTOR GUIDE		
		FEMALE
		MALE



## TURN ALL POWER OFF BEFORE STARTING INSTALLATION.

Route all SoftStart wires into the electrical box. Then crimp Connectors onto all SoftStart wires as indicated in drawing.

Step ① Follow White Compressor wire to Run Capacitor "C" terminal. Disconnect from "C" terminal and connect it to Blue SoftStart wire.

Step ② Connect Black SoftStart wire to the terminal that the White Compressor Wire was on.

Step ③ Connect Yellow SoftStart wire on a terminal next to Red Compressor wire on HERM Side of Run Capacitor.

Step ④ **IF you see a second Red wire** next to the Red Compressor wire, disconnect it and seal end with electrical tape.

Step ⑤ Follow Blue Compressor Wire to Relay. Disconnect it from Relay and connect to Brown SoftStart wire. Tape connection.

Step ⑥ Connect Red SoftStart wire on the Compressor terminal that the Blue wire was on.

Secure all wires. Seal connections with electrical tape.

Turn Power and A/C Breaker on. Turn A/C to Auto Cool setting and set the thermostat to 55°F.

Look at SoftStart LED lights. Green light should be "on". Green light means the Compressor is running (there may be a full 3-minute delay before Green light comes on). IF there is no Green light after 4 minutes, call SoftStart Tech Support for assistance.

After establishing Green light operation, re-install all A/C covers.

Turn A/C on, set near to outdoor temperature and run for 30 minutes.

After 30 minutes, operate A/C normally.

SSRV3T Wiring Diagram for Dometic Penguin II K2 Relay

Copyright © MMXII NetworkRV LLC. All Rights Reserved.